

# SHARP

# AQUOS

LED BACKLIGHT TV

## Quick Start Guide

4T-C55GN7000X  
4T-C65GN7000X  
4T-C75GN7000X



<https://global.sharp/restricted/support/aquos/emanual/asia/pdf/gu/android11/Index.html>

#### 外观质量要求:

1. 图文清晰、无残缺、无乱码、颜色准确，内容与文档一致。
2. 尺寸正确，符合公差要求；表面清洁无刮花、无破损；不掉色、无透印，边缘切割整齐等。

#### Appearance and quality Requirements:

1. Contents should be clearly printed without defects or garbled characters. Contents and colors should be consistent with the drawing.
2. Size should be correct and conform to the tolerance requirements. The edges should be cut neatly, and the surface should be clean without scratches, damages, fading or printing through.

#### 技术要求:

1. 材质: 80G 书写纸, 黑白印刷。
2. 尺寸: A5 (148 X 210 mm), 尺寸公差 (0/-3)。
3. 书本式装订: 当页数 ≤ 80P 时, 骑马钉装订; 当页数 > 80P 时胶装。
4. 若封面为彩色印刷, 纸张 250 克以下过 PE 膜; 250 克及以上过 UV。
5. 对于多语种多个封面, 注意所有封面页必须排版在右边。
6. 环保: 符合 RoHS、Reach 和 TSCA 最新标准。

#### Technical requirements:

1. Material: 80g wood-free paper and printed in white and black.
2. Size: A5 (148 X 210 mm) with a tolerance of (0/-3) mm.
3. If there are more than 80 pages, user manual is bound with glue. If not more than 80 pages, it is bound with staples.
4. On the color cover, add PE film if less than 250g paper is used, and add UV film if not less than 250g.
5. For multiple covers in multiple languages, please note that all cover pages must be arranged on the right.
6. Meet the latest standards of RoHS, Reach and TSCA.

#### 深圳创维-RGB电子有限公司

SHENZHEN CHUANGWEI-RGB ELECTRONICS CO., LTD.

物料名称 (TITLE)	快速操作指南	品牌名称 (BRAND NAME)	SHARP
产品型号 (MODEL)	A5D-9K90T	销售型号 (SALES MODEL)	4T-C55GN7000X 4T-C65GN7000X 4T-C75GN7000X
视角 (PROJECTION)		物料编号 (PART NO.)	
单位 (UNITS)	mm	绘制/日期 (DWN./DATE)	刘功霞 2024-02-26
比例 (SCALE)	1:1	校核/日期 (CHK./DATE)	
版本号 (VERSION NO.)	1.0	批准/日期 (APP./DATE)	



# CONTENT

PREPARATION .....	1
WARNING AND PRECAUTION .....	2
TERMINAL DIAGRAM .....	5
TERMINAL CONNECTION .....	6
REMOTE CONTROL .....	7
TV SET FUNCTION AND INDICATOR .....	8
BASIC OPERATION .....	10
End User License Agreement .....	11
TROUBLE SHOOTING .....	14
SPECIFICATION .....	16
LICENSE .....	19

# PREPARATION

 
Note:

- 1). The illustrations in this QSG are only for reference.
- 2). Avoid pressing the screen to prevent screen damage.
- 3). Two or more persons are required for safe handling of a large TV to prevent any damages or injuries.

## Unpacking and Installation

1. Open the package.
2. Take out the TV.
3. Install the TV stands.
4. Connect the power cord.


## Standard Accessories

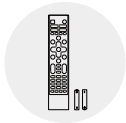

Batteries x2 & Remote Control



 Power Cord

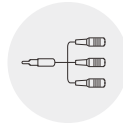


AV Converting Cable



TV Stands



 Stand Screws x4

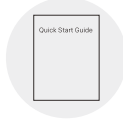


Quick Start Guide


## Stand Installation Instructions

 Step 1: Take out the TV and carefully put it (screen downward) on a stable and flat table with a soft cloth or cushion on it.

Step 2: Please check to make sure there is the same mark(A/B) on the TV bottom and the correct stand.

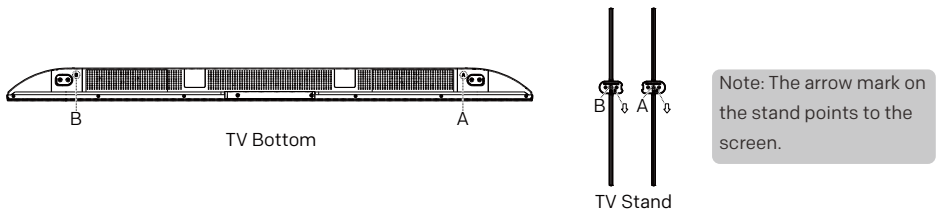

 Step 3: Fix each stand by fastening two stand screws.

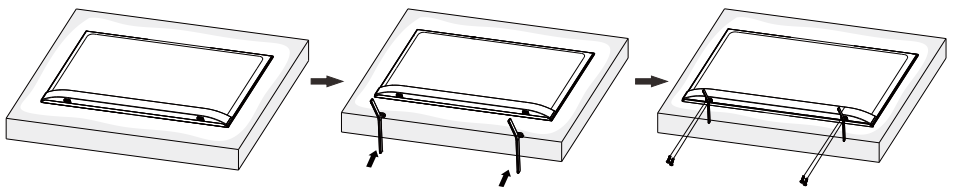



# WARNING AND PRECAUTION

- Stand base must be attached to prevent the TV set from falling down and cause injuries.
- Cleaning — Unplug the AC cord from the AC outlet before cleaning the product. Use a soft damp cloth to clean the product. Do not use liquid cleaners, aerosol cleaners or chemical cloth to clean it, as such materials may damage the product.
- Water and moisture — Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.
- Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock.
- Stand — Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.
- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.
- Ventilation — The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is struck forcefully or with a sharp object. If the LCD panel is broken, be careful not to be injured by broken glass.
- Heat sources — Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.
- To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.
- Do not place heavy objects on this product or stand on it. Doing so could cause injury if the product overturns. Take special care near children and pets.
- The LCD panel is made with extremely high precision technology, and has 99.99% or more effective pixels. The 0.01% or less missing pixels or those that are always lit is not a malfunction.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
-  Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.(Only for Class I appliance)
- If the apparatus doesn't have the symbol  in its rating label and its power cord has three pins, it means protective earthing connection is needed. The apparatus should be connected to a mains socket outlet with a protective earthing connection.(Only for Class I appliance)

## Precautions when transporting the TV

When transporting the TV, never carry it by holding or otherwise putting pressure onto the display. Be sure to always carry the TV by two people holding it with two hands — one hand on each side of the TV.

- Do not display a still picture for a long time, as this could cause an afterimage to remain.
- Install the product on the place where the AC cord can be unplugged easily from the AC outlet or from the AC INPUT terminal on the rear of the product.
- Do not install the TV in a location in which it will be subject to water drops such as underneath an air conditioning unit or in the vicinity of a humidifier.
  - Water drops falling onto the TV and water entering inside it may result in fire, electric shock, or malfunctions.
  - We recommend that you install the TV at least 1m away from the outlet of an air conditioner.

 
## WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Positioning the TV

- Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.
- Fix the rear of enclosure to wall (only for some countries)


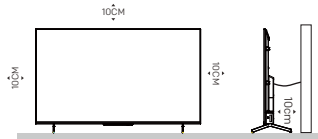


Note: The picture is only for reference.



- Warning: Stability Hazard  
A TV set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:
  - ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the TV set.
  - ALWAYS use furniture that can safely support the TV set.
  - ALWAYS ensure the TV set is not overhanging the edge of the supporting furniture.
  - ALWAYS educate children about the dangers of climbing on furniture to reach the TV set or its controls.
  - ALWAYS route cords and cables connected to your TV so they cannot be tripped over, pulled or grabbed.
  - NEVER place a TV set in an unstable location.
  - NEVER place the TV set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV set to a suitable support.
  - NEVER place the TV set on cloth or other materials that may be located between the TV set and supporting furniture.
  - NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the TV or furniture on which the TV is placed. If the existing TV set is being retained and relocated, the same considerations as above should be applied.

## Mounting on a Wall

  - An optional wall mount can be used with your TV.  
Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices.
- To prevent product damages or personal injuries, please make sure that the TV screen is kept upright, or tilted upward or downward within the angle range of  $0^{\circ}\sim 5^{\circ}$  while mounting the TV onto the wall.
- In case of exceeding the above angle range ( $0^{\circ}\sim 5^{\circ}$ ) of tilting downward, please purchase the auxiliary accessories from the local dealer to mount the TV for safe installation and usage. Otherwise, it will not be covered by the warranty and the user should be liable for all consequences and responsibilities.

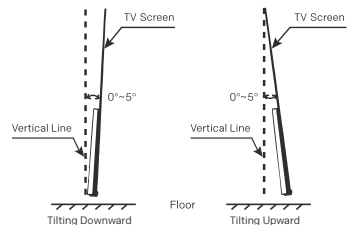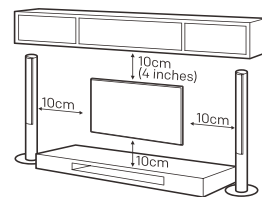

- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur.
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized wall mount and contact the local dealer or qualified personnel. Otherwise it is not covered by the warranty.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Use the screws and wall mounts that meet the following specifications. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.

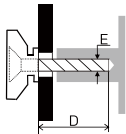  

Model Size		55"		65"		75"		
		Top	Down	Top	Down	Top	Down	
Screw	Diameter(mm) "E"	M6	M6	M6	M6	M6	M6	
	Depth(mm) "D"	Max	28	15	30	30	30	30
		Min	19	10	20	20	28	28
	Quantity		2	2	2	2	2	2
A * B * C		200 * 200 * 200		400 * 200 * 400		600 * 400 * 600		

## Precautions For Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.
- Before Bluetooth searching, please make sure you have turned external Bluetooth devices in the pairing mode. For the Bluetooth remote control supplied with the TV (may not be available), you can press **BACK** and **HOME** buttons together to open its pairing mode. For other Bluetooth devices, please read their own instruction manuals for opening the pairing mode.

## Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

- Please note the batteries' polarity, to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace new battery. Remove the batteries from the remote control unit if you do not intend to use it for a long time.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose of batteries in compliance with relevant environmental protection regulations.
- **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

 
# TERMINAL DIAGRAM

**Note:**

The pictures are only reference.

Terminal quantities and names may vary depending on the region or model.

TV (rear view)

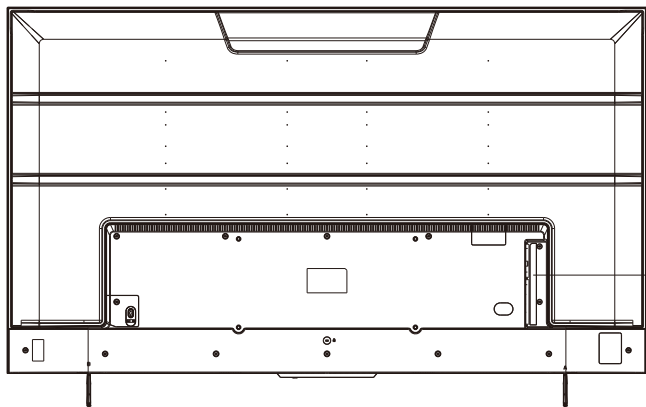

AV IN

ANTENNA IN

USB2  
USB1  
5V<sub>DC</sub>=300mA

HDMI1(4K@60Hz)  
eARC/ARC

HDMI2  
(4K@120Hz)

HDMI3  
(4K@120Hz)

DIGITAL  
AUDIO OUT

LAN




# TERMINAL CONNECTION

 Note:

- 1). Terminal quantities and names may vary depending on the region or model.
- 2). External equipments and cables shown herein are not supplied with the TV.
- 3). To avoid product damage or personal injury, please make sure that you have disconnected the TV power cord before connecting the external devices.

## • AV IN

Receive analog audio and video signals from external AV devices.



## • ANTENNA IN

Connect a coaxial cable to receive signals from the antenna or cable.



 
## • USB

Connect a USB storage device.



## • HDMI

Receive digital audio and video signals from external HDMI devices.




## • DIGITAL AUDIO OUT

Use an optical cable to output your TV's audio signal to a compatible digital audio receiver.



## • LAN

 Wired network port.



# REMOTE CONTROL

 
Note:

1). The image, buttons and functions of remote control may vary depending on the region, model or source.

2). You can press the **MIC** button to quickly pair the Bluetooth remote control with your TV set.

3). Fast boot standby state: State that the TV quickly stands up

Shut down standby state: State that the power consumption is reduced

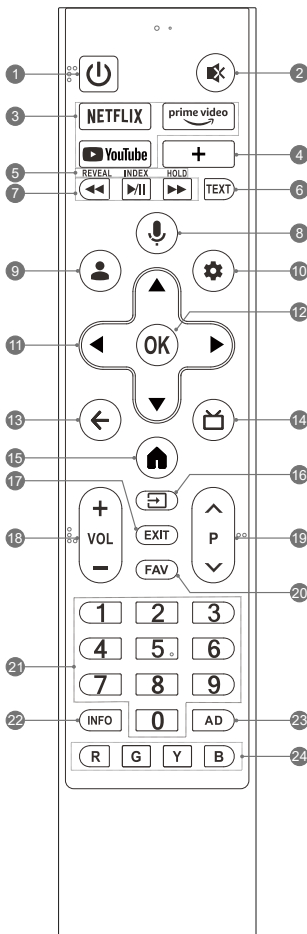

**1. POWER (⏻):** Turn on the TV, short press to fast boot standby state; long press to turn the TV to shut down standby state

**2. MUTE (🔇):** Mute or restore the TV sound.

**3. Application Buttons:** Access specific applications quickly and directly.

**4. Favorite Button:**

**\*How to assign an app or a system function**

- Press Favorite button to display Daily Key.

- Select an app or a system function to assign to Daily Key.

**\*When an app or a system function is assigned**

- Short press Favorite button to open the app or the system function you assigned.

- Long press Favorite button to display Daily Key screen.

**5 & 6. Teletext Buttons**

- **TEXT:** Access or exit the teletext menu.

- **REVEAL:** Display or hide the concealed information.

- **INDEX:** Display index page.

- **HOLD:** Hold the teletext page on screen without updates or changes.

**7. Media Player Buttons**

- **Play/Pause (⏮/⏭):** Start or pause the playback.

- **Fast Backward (⏮):** Fast backward the playback.

- **Fast Forward (⏭):** Fast forward the playback.

**8. MIC (🎤):** Start using the near field voice function.

- Short press MIC button to wake up the voice assistant.

- Long press MIC button to start receiving your voice command. After your speaking, release MIC button to run voice function.

**9. ACCOUNT (👤):** Sign in with your Google account to get the entertainment you love.

**10. Dashboard (⚙️):** Access the dashboard of your Google TV™.

**11. UP/DOWN/LEFT/RIGHT (▲/▼/◀/▶)**

Navigate the menu to select the content you need.

- Press **UP/DOWN** button to switch channels.

**12. OK:** Confirm, enter or execute the selected item or access the channel list.

**13. BACK (◀):** Return to upper-level content, or exit the current screen.

**14. GUIDE (📺):** Switch to the TV mode, or access the Electronic Program Guide in DTV mode.

**15. HOME (🏠):** Access the home screen.

**16. INPUT/ SOURCE (📺):** Access the source menu.

**17. EXIT:** Exit the current operation.

**18. Volume Up/Down (VOL +/-):** Adjust the sound volume.

**19. Program Up/Down (P ▲/▼):** Switch channels.

**20. FAV:** Access the list of favorite channels.

**21. Number Buttons (0~9):**

Select the channel directly, or input a number.

**22. INFO:** Access the INFO interface.

**23. AD:** Adjust audio settings including audio language, sound tracks, audio type, and so on.

**24. Color Buttons (R/G/Y/B):**

Execute the prompt function in specific mode.

 
# TV SET FUNCTION AND INDICATOR

**Note:**

- 1). The colour of indicators lit in various modes or circumstances may vary depending on the region or model.
- 2). The voice function may not be available depending on the region, model or language.

## 1. TV Control Button(⏻)

- \* In fast boot standby state , which is less energy saving, press TV control button, which is on TV bottom to turn on the TV in a short time.
- \* In shut down standby state, which is more energy saving, press TV control button, which is on TV bottom to turn on the TV in a standard time.
- \*In working status:  
When Short press TV Control button the keypad menu will appear on the bottom of screen. Then select keypad menu by pressing TV Control button shortly.  
Long press TV Control button to execute the keypad menu you selected.

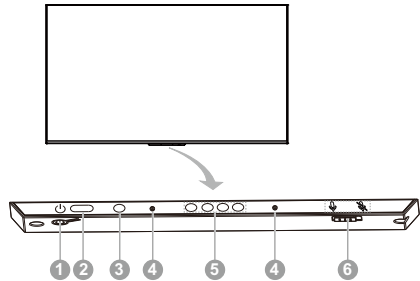

**Note:**

Long press TV control button to turn the TV to shut down standby state when keypad menu isn't displayed.

## 2. Remote Sensor

Receive the signal transmitted by the remote control.

## 3. Power Indicator

Indicate the status of the TV power.

- \* Lit in red: fast boot standby state/shut down standby state
- \* Unlit: working mode / power off.

## 4. Hands free MIC

Microphones of Hands free MIC voice function. It is best to keep yourself within 3 meters away from the Hands free MIC while using the Hands free voice function.

## 5. Hands free indicator

Indicate the status of Hands free MIC voice function.

- \* Lit in white: Hands free MIC are turned on, and Hands free MIC voice function is being used.
- \* Unlit: Hands free MIC voice function is not being used.
- \* Lit in orange: Hands free MIC are turned off.

## 6. Switch of Hands free MIC

Turn on or turn off Hands free MIC switch, which is on TV bottom. Only after turning on the Hands free MIC, successfully connecting your TV to the network and signing in to your Google account, you can start to use the Hands free MIC voice function by saying the hotword: "Ok Google" or "Hey Google".

**Note:**

If you select "No thanks", how can you set to "Yes, I'm in" without reset the TV?

Please use the following procedure:

1. From the ACCOUNT (👤); , select "Manage accounts" > "Google Assistant" > "Hands-free MIC".
2. Turn on the Hands-free MIC.
3. Use the far field voice function by saying the hotword: "Ok Google" or "Hey Google" and choose the "Yes, I'm in".

## VOICE CONTROL MIC ON RC



### 1. Voice control MIC

Microphone of voice function.

It is best to keep your mouth within 5 centimeters away from the microphone while using the voice function.

### 2. MIC button of voice function

Press to start using the voice function. Only after successfully connecting your TV to the network, pairing the Bluetooth remote control with your TV and signing in to your Google account, you can press MIC button to start using the voice function.

## Pair Bluetooth® remote control with your TV

For the remote control supplied with your TV, please finish pairing with your TV before using it for voice function. The pairing can be done by just pressing the **MIC** button on any interface, or at the first step of "Initial Settings", or in "Settings".

 
In settings, please refer to the following steps to pair the remote control:

1. Select **Dashboard** button → <Ⓜ> icon → Remotes & Accessories → Pair accessory.
2. Press **BACK** and **HOME** buttons simultaneously until there shows the name of your Bluetooth remote control on the TV searching interface.
3. Press **OK** button to start pairing.
4. It will show "Paired" after Bluetooth remote control is paired with the TV successfully.

# BASIC OPERATION

## Install Remote Control Batteries

- ①. Stand the remote control upside down as shown in the right illustration and press lightly the part marked with ▶.
- ②. Pressing down, pull the remote control from the both sides to remove the back cover.  
(\*It may be hard at first, so please pull with a little force.)
- ③. Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.  
(\*Make sure to put batteries in the minus (-) side at first.)

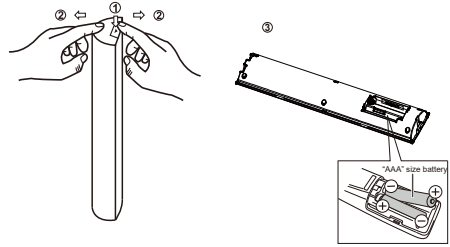

*Note: The picture is only for reference.*

### WARNING:

*A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.*

# End User License Agreement

## 1. General

Please read this agreement carefully before using this TV. Using this TV indicates your acceptance of this agreement. We reserve all rights not expressly granted to you in this End User License Agreement.

The End User License Agreement ("EULA") is a legal agreement between you (user of this TV) and us (the TV manufacturer) for the TV software, owned by us, third-party providers or third-party licensors. The TV software includes software for this TV, including updated or modified software, provided by us or third parties, whether stored on media or downloaded to this TV via any method, but not open source software.

## 2. Software License

You can't use the TV software except specified herein. We and third-party licensors grant you a limited license to use the TV software only on this TV. The TV software may create data files automatically and you agree that any such data files should be deemed as a part of the TV software. The TV software is licensed as a single product, and you should not separate its component parts for use on other devices unless expressly authorized by us. The software of a third party may be accompanied by a separate license, in which case you agree that such third-party license will govern your use of such third-party software.

You agree not to modify, reverse engineer, decompile or disassemble the TV software in whole or in part, or to use the TV software in whole or in part for any purpose other than allowed under this EULA. In addition, you should not TV software. You shall not (1) bypass, modify, defeat or circumvent any of the functions or protections of the TV software or any mechanisms operatively linked the TV software; or (2) remove, alter, cover or deface any trademark or notices on the TV software. We and third-party licensors retain all rights that this EULA does not expressly grant to you.

This TV contains open source software which is subject to open source licenses. Some GPL executables and LGPL / MPL libraries used in this TV are subject to the GPL2.0/LGPL2.1/MPL1.1 License Agreements. We hereby offer to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this TV for which such offer is requested by the respective licenses. This offer is valid for a period of three (3) years from the date the distribution of this TV by us. To obtain the source code, please contact our service center.

## 3. Software Updates or Modifications

We, or third parties may update or modify the software from time to time, for example, but not limited to, for the purposes of error correction, improvement of features and enhancement of security features. Such updates or modifications may change or delete the nature of features or other aspects of the TV software, including features you may rely on.

The updated or modified software will be provided to you by us or third parties through the network or other methods. And you may have the right to decide whether or not to accept or install such updates or modifications according to your actual need. Generally, as for updates or modifications provided by us, we recommend you to accept or install them for better use of this TV, and for some system-critical updates or modifications provided by us, which may decide whether or not this TV can be used normally and continuously, we may automatically download and install such updates or modifications in this TV without asking for your acceptance. As for updates or modifications provided by third parties, you decide completely at your own discretion, risk or liability. Please do not turn off this TV during software updating, otherwise it may cause serious problems for which you should be responsible by yourself.

## 4. Network - Based Services and Contents

This TV has the smart feature which provides access to selected application services ( the services ) from third - party providers. The smart feature requires a network connection. Your ability to access the services, and the quality of the services presented, are subject to your network provider ' s service and terms as well as the network speed you use.

The contents, including but not limited to data, music, sound, audio, images, graphics, likenesses, software, text, video, messages, tags or other materials, provided by third-party providers, and the availability of the services are at the sole discretion and under the control of third-party providers. The contents and the services of each third - party provider are provided pursuant to the terms and conditions of that third - party provider.

The services and the contents are only used for your own personal, private viewing, and shall not be used for any viewing or exhibition for which ( or in a venue in which ) an access, or viewing fee is charged, or for any public exhibition or viewing. The services and the contents are not available in all languages or in all countries or regions. Third parties make no representation that the services and the contents are appropriate or available for use in any particular location. To the extent you choose to use or access the services and the contents, you do at your own initiative and are responsible for compliance with any applicable laws, including but not limited to applicable local laws and privacy and data collection laws.

Some web pages or videos may not be supported due to network failure, difference of regions or service interruption, which has nothing to do with this TV. Some models may support apk installation by yourself, when using this feature, you should ensure the correctness, security, compatibility and legality of the apk and should be responsible for any obligations thus resulted in. Some models may support installing and using file manager application by yourself, when using this feature, you should not revise or delete a system

file, otherwise it will cause function failure or data loss of this TV, and you should be responsible for any obligations thus resulted inobligations thus resulted in. The services and the contents are controlled by third - party providers by means of network and transmission facilities, which are subject to alteration, suspension, removal, termination or interruption, or invalid access at any time without further notice in that the manufacturer is unable to control or to be informed of the aforesaid change. We make a further declaration that we disclaim any responsibility or liability arising from customer's failure to use the network application services and contents caused by, including but not limited to, failure of network connection or communication lines, technological updates, or the alteration, suspension, interruption, termination, disabling, or removal of any services or contents by the network application providers etc.

#### 5. Content Rights

We are not responsible for the contents you may access as a part or via your use of the services that were created by or are owned by a third party. Any responsibility or liability for the contents shall remain solely with the creator, owner or licensor of such third - party content, and not with us.

You understand, acknowledge and agree that the contents are protected by the proprietary and intellectual property rights of the creator, owner or licensor of such third - party content. You must not modify, reverse - engineer, copy, rent, lease, loan, sell, resell, re-transmit, distribute, trade, publicly display or create derivative works of any third-party content, either in whole or in part, without obtaining a license from the creator, owner or licensor.

The content creator, owner or licensor may use Microsoft PlayReady content access technology ("PlayReady") to protect their intellectual property, including copyrighted content. This TV uses PlayReady technology to access PlayReady-protected Content and/or WMDRM-protected Content ("WMDRM" means Microsoft Window Media digital rights management technology). If this TV fails to properly enforce restrictions on Content usage, the content creator, owner or licensor may require Microsoft Corporation ("Microsoft") to revoke this TV's ability to consume PlayReady-protected Content. Revocation should not affect unprotected Content or Content protected by other content access technologies. The content creator, owner or licensor may require you to upgrade PlayReady to access their Content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The content creator, owner or licensor may use Widevine DRM content access technology to protect their intellectual property, including copyrighted content. This TV uses Widevine DRM technology to access Widevine DRM-protected Content. If this TV fails to properly enforce restrictions on Content usage, the content creator, owner or licensor may require Widevine Technologies (a company) to revoke this TV's ability to consume Widevine DRM-protected Content. Revocation should not affect unprotected Content or Content protected by other content access technologies. The content creator, owner or licensor may require you to upgrade Widevine DRM to access their Content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

#### 6. Use by Minors

If you are a parent or guardian permitting a person under the legal age of majority ("Minor") to use the services or the contents, you agree to: (1) supervise the Minor's use of the services or the contents. (2) assume all risks associated with the Minor's use of the services or the contents, including receipt and transmission of information and materials via the services, and the transactions made for digital goods, the services and the contents. (3) assume any liability resulting from the Minor's use of the services and the contents. (4) be bound by this EULA for the Minor's access and use of the services and the contents.

#### 7. Privacy Policy

We don't collect or use any personal information by this TV. However, when you access the applications provided by third-party providers over which we have no control, third parties may collect or receive certain information through the use of Cookies or other similar technologies. We are not responsible for the security or privacy of any information collected by third parties. You should exercise caution and review the privacy statements applicable to the third-party services you use.

For example, but not limited to, when you watch a video or access the services or contents provided by a third-party provider. That provider may collect or receive information about this TV (its IP address, device identifies, etc.), the requested transaction (your request to buy or rent the video), your use of the services and contents, and so on.

To allow you to access, browse or use the services and the contents, third parties may require you to establish a user account for which you must provide them with your true, accurate, current and complete information about yourself. You are responsible for maintaining the confidentiality of any or all of your passwords associated with any such account.

Third parties may charge fees for access to their contents or services, and in no event will you be charged for access to any portion or all of the contents and services unless the third-party provider obtains your prior agreement to pay such charges. If you don't consent to such charges, you may not have access to paid contents or services for which such charges apply.

When you use the TV software or access the services, third parties may collect data from, control, and/or monitor this TV, or other devices running or interacting with this TV. We are not responsible and liable for any activities between you and third parties.

#### 8. Disclaimer of Warranty

THE TV SOFTWARE, THE SERVICES AND THE CONTENTS ARE PROVIDED TO YOU "AS IS" AND "AS AVAILABLE" AND WITHOUT WARRANTIES OF ANY KIND. WE, THIRD-PARTY PROVIDERS AND THIRD-PARTY LICENSORS DISCLAIM ALL WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, TITLE, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. WE, THIRD-PARTY PROVIDERS AND THIRD-PARTY LICENSORS DO NOT WARRANT THAT THE TV SOFTWARE, THE SERVICES OR THE CONTENTS WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE TV SOFTWARE THE SERVICES OR THE CONTENTS WILL BE UNINTERRUPTED OR ERROR FREE.

FURTHERMORE, WE, THIRD-PARTY PROVIDERS AND THIRD-PARTY LICENSORS DO NOT WARRANT OR MAKE ANY REPRESENTATIONS OR CONDITIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE TV SOFTWARE, THE SERVICES OR THE CONTENTS IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY OR OTHERWISE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY US SHALL CREATE A WARRANTY OR CONDITION, OR IN ANY WAY CHANGE THIS DISCLAIMER OF WARRANTY AND CONDITION. SHOULD THE TV SOFTWARE, MEDIA ON WHICH THE TV SOFTWARE IS FURNISHED, THE SERVICES OR THE CONTENTS PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVING, REPAIR OR CORRECTION. YOU UNDERSTAND, ACKNOWLEDGE, AND AGREE THAT THE SERVICES CONTENTS AND RELATED SOFTWARES ARE PROVIDED BY THIRD-PARTY PROVIDERS OVER WHICH WE HAVE NO CONTROL. THE SELECTION, PROVISION, QUALITY, PICTURE SIZE AND AVAILABILITY OF SUCH CONTENTS OR SOFTWARE ARE THE SOLE RESPONSIBILITY OF SUCH THIRD-PARTY PROVIDER OR OTHER THIRD-PARTY PROVIDERS. YOU AGREE TO COMPLY WITH ANY AND ALL TERMS AND CONDITIONS THAT THE THIRD-PARTY MAY SET FOR ITS SERVICES, CONTENTS AND SOFTWARE. YOU UNDERSTAND, ACKNOWLEDGE, AND AGREE THAT ANY CONTENTS OR SOFTWARE DOWNLOADED OR OTHERWISE OBTAINED THROUGH USE OF THE SERVICES IS DONE AT YOUR OWN DISCRETION AND RISK, AND YOU SHOULD BE SOLELY RESPONSIBLE FOR ANY CONSEQUENCES THAT RESULTS, INCLUDING ANY DAMAGE OR HARM CAUSED BY ANY VIRUS, SPYWARE, WORM OR MALWARE.

#### 9. Limitation of Liability

TO THE EXTENT PERMITTED BY APPLICABLE LAW, WE SHALL NOT BE LIABLE TO YOU, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), OR ANY THEORY OF LIABILITY, AN WHETHER OR NOT THAT THE POSSIBILITY OF SUCH DAMAGES OR LOSSES HAS BEEN NOTIFIED TO US, FOR THE FOLLOWING CIRCUMSTANCES:

- (1). ANY INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.
- (2). ANY LOSS OF INCOME, BUSINESS, ACTUAL OR ANTICIPATED PROFITS, OPPORTUNITY, GOODWILL, OR REPUTATION (WHETHER DIRECT OR INDIRECT).
- (3). ANY DAMAGE TO OR CORRUPTION OF DATA (WHETHER DIRECT OR INDIRECT).
- (4). ANY LOSS OR DAMAGE AS A RESULT OF:
  - (A) USE YOU MAKE OF THE SERVICES.
  - (B) ANY RELIANCE PLACED BY YOU ON THE COMPLETENESS, ACCURACY OR EXISTENCE OF ANY ADVERTISING.
  - (C) ANY RELATIONSHIP OR TRANSACTION BETWEEN YOU AND AN THIRD-PARTY PROVIDER OF ANY SERVICE OR CONTENT, INCLUDING ADVERTISERS AND SPONSORS WHOSE ADVERTISING IS MADE AVAILABLE ON OR VIA THE SERVICES.
  - (D) ANY CHANGES TO THE SERVICES, OR ANY PERMANENT OR TEMPORARY CESSATION IN THE PROVISION OF THE SERVICES OR ANY PORTION THEREOF.

#### 10. Dispute Resolution

If a dispute, controversy or difference arising in any way from this EULA or your use of the TV software is not amicably settled, it shall be subject to the non-exclusive jurisdiction of the courts of the jurisdiction where you are a resident. Notwithstanding the foregoing, we may apply for injunctive remedies (or an equivalent type of urgent legal relief) that we deem necessary or appropriate in any jurisdiction.

#### 11. Applicable Law and Severability

This EULA is governed by the laws of the jurisdiction where you are a resident, without regard to its conflict of law provisions. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall remain in full force and effect.

#### 12. Termination

This EULA is effective until terminated. Your rights under this EULA will terminate automatically or otherwise cease to be effective without notice from us if you fail to comply with any items of this EULA. Upon termination of this EULA, you shall cease all use of the TV software, and you will have no recourse against us, third-party licensors or third-party providers.

#### 13. Entire Agreement and Governing Language

This EULA is the entire agreement between you and us relating to the TV software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the TV software or any other subject matter covered by this EULA. Any translation of this EULA is provided only for your convenience or local requirements. The English version of this EULA shall govern in the event of contradiction or dispute between English and any non-English versions.



# TROUBLE SHOOTING

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

## General Problem / Solution

- **Remote control does not work**

Change the batteries.

Check if batteries are installed correctly.

Check if main power is connected.

Check if there are some items between remote sensor and remote control.

- **Poor Signal**

This is usually caused by interference from electronic equipments or radio interference sources.

## Picture and Sound / Solution

- **No picture, no sound**

Check the signal source.

Plug another electrical device into the outlet to check if it is working or turned on.

Check if power plug is in good contact with the outlet.

- **No sound, picture OK**

If no sound, unmute the sound or increase the volume.

Open the sound menu and adjust 'Balance'.

- **Abnormal picture**

For no color or bad picture quality, you may:

1. Adjust the color option in menu settings.

2. Keep the TV at a sufficient distance from other electronic products.

3. Try another channel.

Bad TV signal (Display mosaic or snowflakes)

1. Check the signal cable and adjust the antenna.

2. Fine tune the channel.

3. Try another channel.

## Multimedia Player / Solution

- **'This file is invalid' /'Unsupported audio' appears , or audio is normal but video is abnormal, or video is normal but audio is abnormal**

The media file maybe damaged, check if the file can be played on the PC.

Check if video and audio codec is supported.

## Network / Solution

- **Network failure**

Check if the router works well.

Make sure the TV has connected to the router successfully.

## Browser / Solution

- **Web page can not be displayed completely**

Some third-party extensions of the current web page may not be supported, and please close the current web page.

- **Browser is forced to be shut down**

The current web page may include too many contents which cause there isn't sufficient memory and the browser is closed.

## Password / Solution

If you forget the password, clear the password using the following procedure :

1. From the Dashboard, select "Settings" > "System" > "About" > "Reset" > "Factory reset", and then press ENTER/OK.
2. When you perform a reset, the TV will be returned to the factory preset values, and you need to set the password again.

### NOTE

1. As a precautionary measure, make a note of your password, and keep it in a safe place.

#### Note:

1. The pictures in this document are only for reference.
2. Appearances and specifications are subject to change without notice.
3. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.

# SPECIFICATION

Item		Model	4T-C55GN7000X
LCD panel			139 cm
Resolution			8,294,400 pixels (3840 x 2160)
Video colour system			PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60
TV function	TV-standard	Analogue	PAL: B/G, D/K, I SECAM: B/G, D/K, K/K1 NTSC: M
		Digital	DVB-T / DVB-T2 (for Asia only), DTMB (for Hong Kong only)
	Receiving channel	VHF/UHF	44.25 - 863.25 MHz
	TV-tuning system		Auto Preset
	STEREO/BILINGUAL		NICAM: B/G, I, D/K A2 stereo: B/G MTS:M
Audio amplifier			Total 24W (12W x 2)
Terminals	RF IN		75 Ω DIN type
	HDMI 1		HDMI 4K, ALLM, eARC/ARC
	HDMI 2		HDMI 4K, ALLM/VRR (120P)
	HDMI 3		HDMI 4K, ALLM/VRR (120P)
	AV IN		ϕ 3.5 mm jack (AUDIO in, VIDEO in)
	USB		USB 2.0 (DC5V 500mA output)
	USB		USB 2.0 (DC5V 500mA output)
	LAN (10/100 BASE-T)		Network connector
	OPTICAL DIGITAL AUDIO OUT		Optical S/PDIF digital audio output
Wi-Fi Protocol			IEEE 802.11 a/b/g/n/ac 2T/2R Dual Band
Wi-Fi Security			WPA3-Personal, WPA2-Personal, WPA-Personal
Bluetooth			V2.1 + EDR / 4.2 / 5.1
OSD language			English/Simplified Chinese/Traditional Chinese/Arabic/French/Thai/Portuguese/Vietnamese/Russian/Malaysia/Indonesia
Power requirement			AC 100 - 240V, 50/60 Hz
Power consumption (Standby)			190W (0.5W)
Dimensions	without stand W x H x D (mm)		1228 x 715 x 77
	with stand W x H x D (mm)		1228 x 773 x 294
Weight without stand (with stand)			12.6 kg (12.8 kg)
Operating temperature			0°C to + 40°C

Item		Model	4T-C65GN7000X
LCD panel			164 cm
Resolution			8,294,400 pixels (3840 x 2160)
Video colour system			PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60
TV function	TV-standard	Analogue	PAL: B/G, D/K, I SECAM: B/G, D/K, K/K1 NTSC: M
		Digital	DVB-T / DVB-T2 (for Asia only), DTMB (for Hong Kong only)
	Receiving channel	VHF/UHF	44.25 - 863.25 MHz
	TV-tuning system		Auto Preset
	STEREO/BILINGUAL		NICAM: B/G, I, D/K A2 stereo: B/G MTS:M
Audio amplifier			Total 30W (15W x 2)
Terminals	RF IN		75 Ω DIN type
	HDMI 1		HDMI 4K, ALLM, eARC/ARC
	HDMI 2		HDMI 4K, ALLM/VRR (120P)
	HDMI 3		HDMI 4K, ALLM/VRR (120P)
	AV IN		ϕ 3.5 mm jack (AUDIO in, VIDEO in)
	USB		USB 2.0 (DC5V 500mA output)
	USB		USB 2.0 (DC5V 500mA output)
	LAN (10/100 BASE-T)		Network connector
	OPTICAL DIGITAL AUDIO OUT		Optical S/PDIF digital audio output
Wi-Fi Protocol			IEEE 802.11 a/b/g/n/ac 2T/2R Dual Band
Wi-Fi Security			WPA3-Personal, WPA2-Personal, WPA-Personal
Bluetooth			V2.1 + EDR / 4.2 / 5.1
OSD language			English/Simplified Chinese/Traditional Chinese/Arabic/ French/Thai/Portuguese/Vietnamese/Russian/Malaysia/ Indonesia
Power requirement			AC 100 - 240V, 50/60 Hz
Power consumption (Standby)			270W (0.5W)
Dimensions	without stand W x H x D (mm)		1448 x 829 x 83
	with stand W x H x D (mm)		1448 x 904 x 326
Weight without stand (with stand)			18.3 kg (18.7 kg)
Operating temperature			0°C to + 40°C

Item		Model	4T-C75GN7000X
LCD panel			189 cm
Resolution			8,294,400 pixels (3840 x 2160)
Video colour system			PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60
TV function	TV-standard	Analogue	PAL: B/G, D/K, I SECAM: B/G, D/K, K/K1 NTSC: M
		Digital	DVB-T / DVB-T2 (for Asia only), DTMB (for Hong Kong only)
	Receiving channel	VHF/UHF	44.25 - 863.25 MHz
	TV-tuning system		Auto Preset
	STEREO/BILINGUAL		NICAM: B/G, I, D/K A2 stereo: B/G MTS:M
Audio amplifier			Total 30W (15W x 2)
Terminals	RF IN		75 Ω DIN type
	HDMI 1		HDMI 4K, ALLM, eARC/ARC
	HDMI 2		HDMI 4K, ALLM/VRR (120P)
	HDMI 3		HDMI 4K, ALLM/VRR (120P)
	AV IN		ϕ 3.5 mm jack (AUDIO in, VIDEO in)
	USB		USB 2.0 (DC5V 500mA output)
	USB		USB 2.0 (DC5V 500mA output)
	LAN (10/100 BASE-T)		Network connector
	OPTICAL DIGITAL AUDIO OUT		Optical S/PDIF digital audio output
Wi-Fi Protocol			IEEE 802.11 a/b/g/n/ac 2T/2R Dual Band
Wi-Fi Security			WPA3-Personal, WPA2-Personal, WPA-Personal
Bluetooth			V2.1 + EDR / 4.2 / 5.1
OSD language			English/Simplified Chinese/Traditional Chinese/Arabic/French/Thai/Portuguese/Vietnamese/Russian/Malaysia/Indonesia
Power requirement			AC 100 - 240V, 50/60 Hz
Power consumption (Standby)			360W (0.5W)
Dimensions	without stand W x H x D (mm)		1675 x 967 x 88
	with stand W x H x D (mm)		1675 x 1032 x 326
Weight without stand (with stand)			34.0 kg (34.3 kg)
Operating temperature			0°C to + 40°C

# LICENSE



Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Chromecast built-in are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision IQ, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright ©1992-2022 Dolby Laboratories. All rights reserved.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



# **SHARP**

SHARP CORPORATION

For Indonesia

NO. REG.:IMKG.2757.11.2022

# **SHARP**

**PT. SHARP TRADING INDONESIA**

Kawasan Industri KIIC, Jl. Harapan Raya Lot LL 1 & 2  
Gedung No. 01, Desa Sirnabaya, Kec. Teluk Jame Timur  
Kabupaten Karawang 41361