


SHARP®

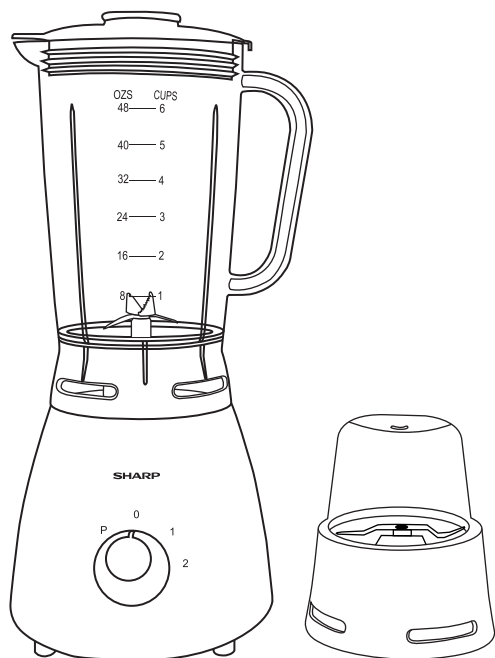

BLENDER

EM-130-WH

SHARP 1.25L 350W JUG BLENDER

Please read these instruction carefully before operating the appliance.

INSTRUCTIONS MANUAL

Congratulations on purchasing our SHARP 1.25L 350W Jug Blender. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE SHARP 1.25L 350W JUG BLENDER

- Powerful 350W motor
- 1.25L calibrated plastic jug with filler-cap cover
- High quality stainless steel blades
- Removable blade assembly for easy cleaning
- 2 speed selector plus pulse for total blending control
- Suitable for all types of food (not suitable for crushing ice or hot liquids)
- With non-slip feet for added stability
- Convenient cord storage
- Safety interlocking mechanism
- For domestic use only
- 1 year warranty

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:


1. Please read the instructions carefully before using this appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid contact with moving parts. Do not insert hands or fingers into appliance while in use.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision

or instruction concerning use of the appliance by a person responsible for their safety.

7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
9. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
10. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
11. Never immerse the unit in water or any other liquid.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
16. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
17. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
18. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
19. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
20. Never carry the appliance using the power cord.

21. Do not leave this appliance unattended during use. Always unplug when the blender is not in use or before cleaning.
22. Always operate the appliance on a smooth, even, stable surface. Always ensure that the lid is in place before operating appliance.
23. Turn the blender on only after the blending unit has been assembled correctly and has been inserted into the motor block and the lid has been attached. Always wait until the blender has stopped completely before removing the blending unit from the motor block.
24. Keep hands and other utensils out of the blender while the blender is in use, to reduce the risk of severe injury to persons or damage to the machine.
25. Ensure that the rotary switch is in the “O” position after each use.
26. Do not operate the appliance without food or liquid in the jug.
27. Do not operate this appliance by means of an external timer or separate remote control system.
28. To avoid the danger of fire and/or explosion, do not use this blender to stir paints or solvents.
29. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
30. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.
31. The blades are very sharp – take extra caution when emptying during cleaning. Failure to could cause serious injury to yourself!

PARTS DIAGRAM

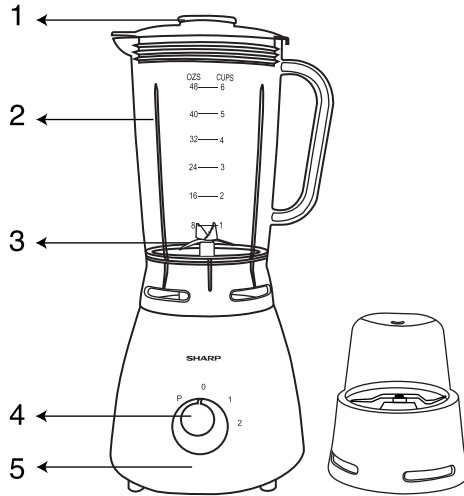

1. Removable cap
2. Plastic jug
3. Stainless steel Blades
4. Variable speed control knob
5. Motor unit

BEFORE FIRST USE

Before using this unit, please read these instructions completely. Save this manual and pass it on to next user.

Unpack the appliance and remove all protective packaging and wrappings. Please ensure to discard the protective packaging and wrappings immediately. It is important to keep these away from babies, infants and children for safety purposes.

Clean the blender as per the cleaning instructions provided. **DO NOT IMMERSE** it in any liquid.

OPERATING INSTRUCTIONS

1. Place food and/or liquids into the plastic jug.
2. Put the lid on the plastic jug and close securely. Place the removable cap into the lid and turn clockwise to lock
3. Switch the unit ON using the rotary switch:
 - '0' is off
 - '1' is low, best used for liquids
 - '2' is high, best used for solids and for mixing liquids with solids.
 - 'P' is for pulse use, best used for short bursts of blending.This setting will automatically move to '0' when released, and will not stay on 'P' permanently.
4. Once finished, move the rotary switch to '0' and pull the plug out of the socket.
5. Remove the plastic jug from the unit by lifting it. No rotating is required to remove the plastic jug.
6. Do not let the blender continue to function for more than 3 minutes each time when grinding heavy ingredients. After grinding heavy ingredients for 3 minutes, the blender must be allowed to cool for at least 10 minutes

USEFUL HINTS

1. When blending solid ingredients, it is best to cut them into small pieces before inserting them into the blender. A diameter of 2-3cm is suggested.
2. Blend only small portions of solid ingredients at a time, adding more once each portion is fully blended.
3. Adequate amount of liquid is needed when blending any type of food.
4. When blending very thick ingredients, use the pulse function to prevent overheating the motor.
5. Dry set mill is not suitable use for liquid form ingredients.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable. Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the speed control is set to “0”.
- It is much easier to clean the blender directly after it has been used. Place lukewarm water into the plastic jug and turn the switch to ‘P’ briefly several times. Empty the plastic jug, disassemble it and wash the parts in warm, soapy water, rinse and dry well.
- Take extra care when handling the blades, as they are very sharp.
- The motor should be wiped with a damp cloth only. Do not let water enter the motor.
- All parts except the motor are dishwasher suitable.
- Do not use bleach or other abrasive substances or solvents to clean your appliance as it can damage the finish.
- Do not immerse the motor in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry a clean, dry, soft cloth.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorized service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved SHARP Sales & Service Centers .

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.



SHARP®

SHARP CORPORATION