 


SHARP

ELECTRIC OVEN

 
MODEL: E019K/EO-19K

OPERATION MANUAL

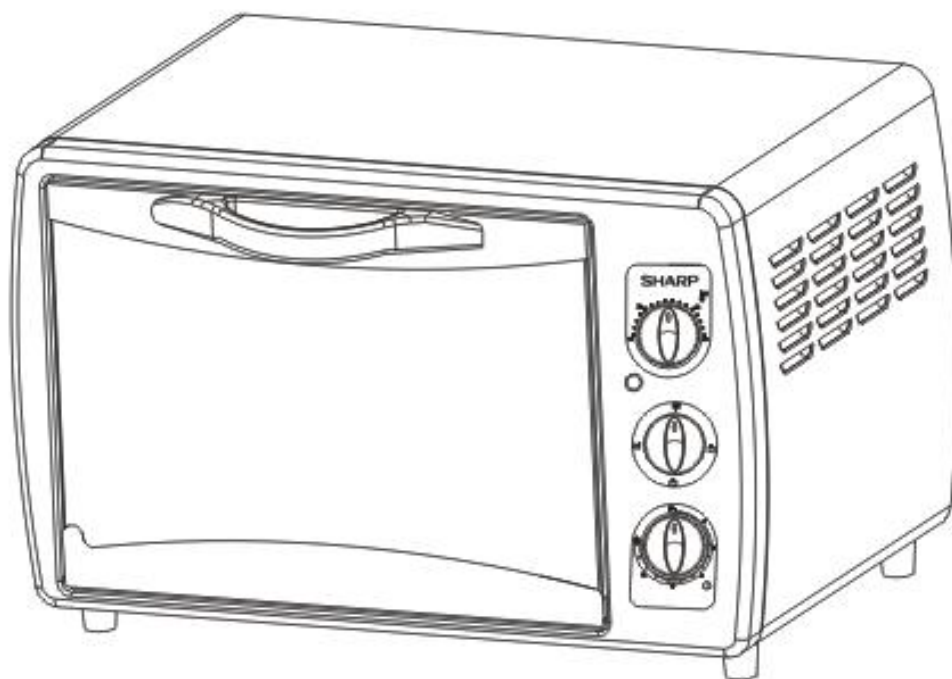


Before operating this appliance, please read these instructions completely

PARTS IDENTIFICATION

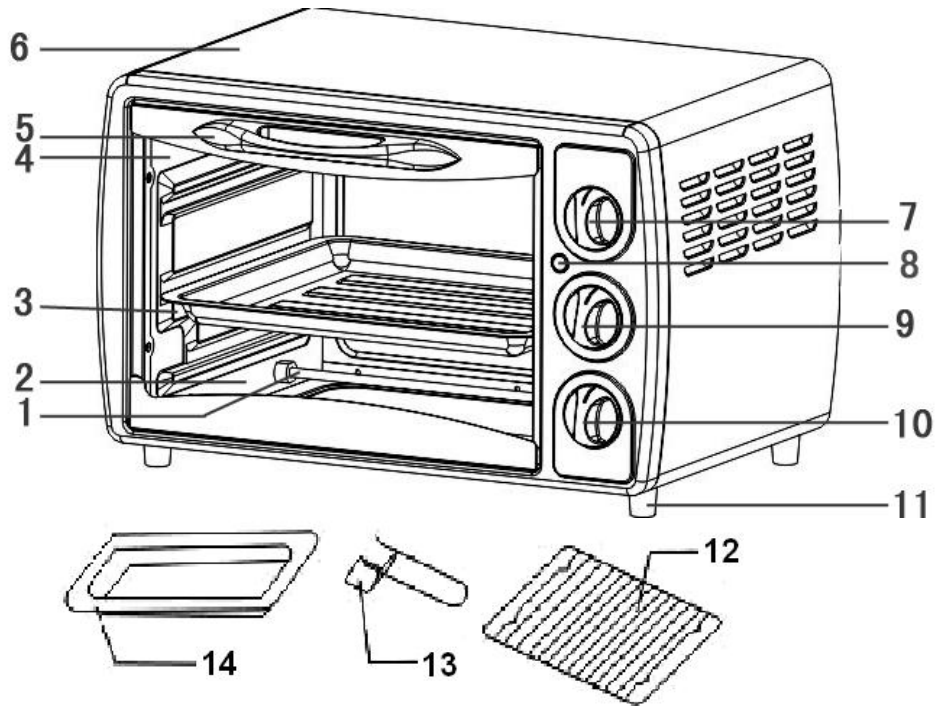

- | | | |
|--------------------|-------------------|----------------------|
| 1.Heating element | 2.Glass door | 3.Rack support |
| 4.Inner case | 5.Door Handle | 6.Housing |
| 7.Temperature knob | 8.Indicator light | 9.Heater select knob |
| 10.Time knob | 11.Stand | 12 Wire rack |
| 13.Tray handle | 14. .Baking tray | |

 CIRCUIT

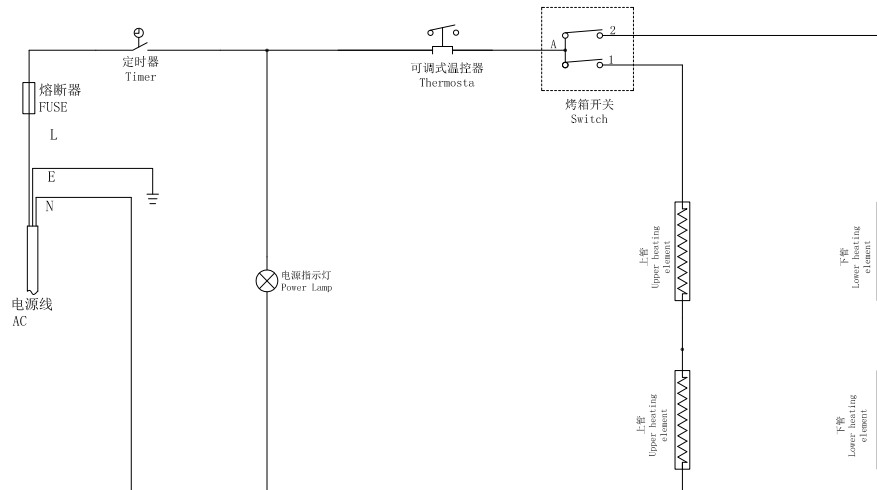

SPECIFICATION

Model NO.	EO19K/EO-19K
Power supply	220-240V 50/60Hz
Power consume	1380W
Package measurement	470*355*360mm
Net weight	5.5KGS

 
CAUTIONS

Special indication:

The accessory image varies from different models. Please refer to the actual model you buy.




Always use the tray handle when inserting or removing the tray. Touching these will cause severe burns.

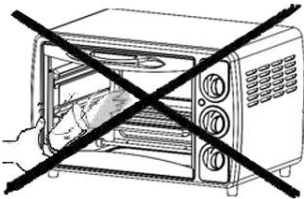

When hot, do not apply water to the glass window, it may cause the glass to break.



 When unplugging the cord, always take hold of the plug itself. Never pull on the cord. Doing so could break the wires inside the cord.

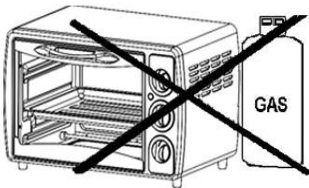

Do not position the unit close to a gas burner or other source of high temperature or do not direct an electric fan & etc during **USE**. By doing so could prevent correct temperature control.



Do not wet the power cord nor handle the unit with wet hands. Always unplug the cord after use, or whenever the unit is to be left unattended. A malfunction while the plug is inserted into the outlet could cause a fire.




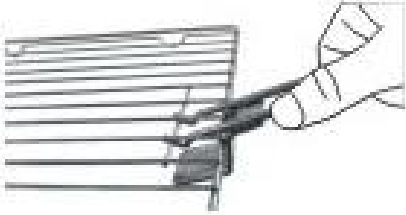 

When cooking oil-splashing dishes such as roast chicken, it is recommended to put 2 sheets of aluminum foils on a tray in order to diminish oil splashing. Put one on a tray. Then oil will drip to a gap between foils.



USE INDICATION

Special indication: the parts and accessory varies from different models. Please refer the image to the real item you buy.

Bake tray and bake grill


Bake tray		How to use tray handle
	Roast Chicken, Hamburg steak, Gratin, Sponge cake, almost all other oven-cooked foods	
Wire rack		
	Baked potatoes, Dry food	
Bake tray and Wire rack		
	For food which will drip/boiled fish, etc	

 The trays are not perfectly square.


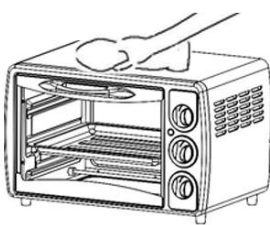 

Note:

Be careful when removing pudding and other hot liquids.

Rack Support
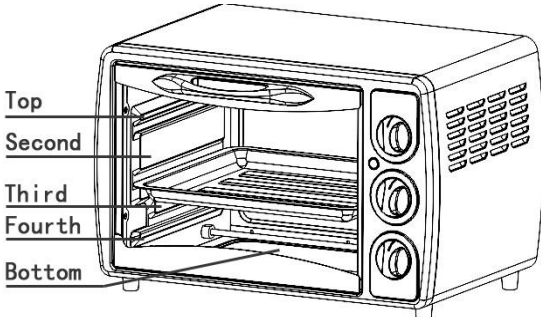
<p>You can adjust the tray at 4 different positions according to the dishes you want to cook.</p>	
---	--

METHOD OF CLEANING

	<p>Take off the plug and cool down before cleaning.</p>
	<p>Use dry cloth to clean outer surface of oven and glass window. When cleaning inside of oven, mopping with cloth can be applied. Never wash it with water as it may cause current leakage when electric parts are wet.</p> <p>Bake tray, bake grill and tray handle can wash with soft cotton (or sponge) and neutral cleaner. Then rinse thoroughly with clean water, then wipe dry. Do not use hard brush that will scratch the interior surface of the oven, and to protect the tray, bake grill and tray handle.</p>
	<p>Do not use the toxic and abrasive cleaners such as gasoline, polishing powder, solvent.</p>

BAKING REFERENCE OF COMMON FOOD

TYPE OF FOOD	TEMPERTURE	TIME
Bread	180	9-13
Cake	180	25-35
Fish	250	10-15
Chicken/Duck	220-250	30-45
Pancake	160	7-10
Beef	250	8-15
Egg/Peanut	125-150	6-10
Hot Dog	200	6-10
Hamburger	240	10-14

OPERATING INSTRUCTIONS

Before using the unit for the first time:

Heat the empty oven.

(1) Insert the tray and bake grill.

(2) Set the heater operating switch to "UPPER & LOWER", set the temperature control dial to "250°C" and heat the empty oven for about 10 minutes.

Note:




There may be some smoke and a burning smell at first use, but this is not a malfunction.

Temperature (switch):

Set the Temperature (switch) for the dishes which you are going to cook.

(Heater select) Switch:

Select "TOP" or "BOTTOM" or "BOTH" according to the dishes you are going to cook. You can observe whether the heaters are working or not by observing the front Indicator light.

 
TOP () , BOTTOM () , BOTH ()

1. Set the arrow on the timer knob to the number which indicates the cooking time (minutes) according to the dishes you are going to cook.

2. Set the Timer switch by turning it clockwise. The oven will turn off automatically at the end of the selected time and a bell will ring

• When setting the Timer to less than 5 min., turn it to more than 6 min. and then back to the selected time.


3. The oven can be turned off manually during cooking by turning the Timer counter-clockwise to the "OFF" position.

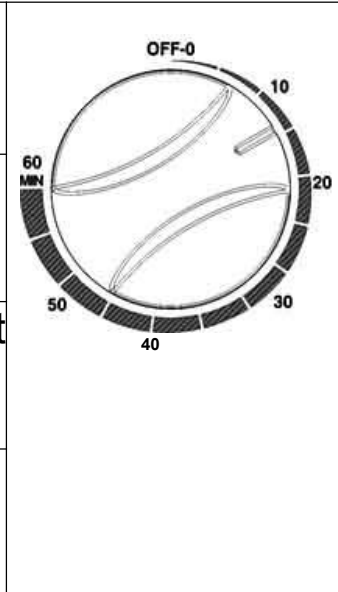

Note:


If the inside of the oven is dirty, cooking may take slightly longer than usual.

 CAUTIONS

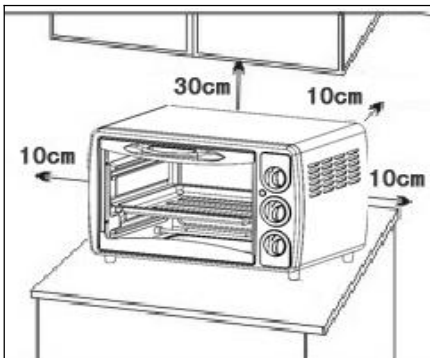


If the oven is positioned too close to a wall, the wall will be burned or stained. Be sure the curtain & etc, are not in contact with the body.

 
Do not put anything between the bottom of the body and the surface on which it is set, an object so placed could be burned.

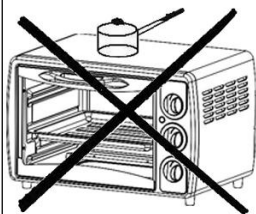

 
Do not put anything on the oven while using it, the heat could cause deformation, cracking, etc.

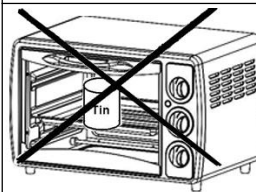

 Any bottled or tinned food can not be heated directly as the bottle or tin would be broken out and scald the person.

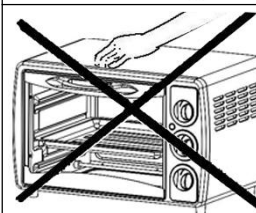

 Be careful! Not to burn yourself during use or immediately after use. The metal parts and glass window of the door become extremely hot during use. Be careful not to touch them when opening and closing the door.

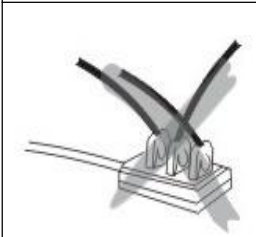

AC power must be taken from a properly wired outlet. Insert the plug completely into the socket. If it is not, it could become abnormally hot. Do not use an electric light outlet. Never connect multiple plugs to the same outlet

MAINTENANCE

1. Other than cleaning mentioned in this instruction manual, no additional maintenance or servicing of this appliance is required.
2. Repairs, when necessary, must be performed at an authorized service facility.
3. This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops,offices and others working environments;
 - farm houses;
 - by clients in hotels,motels and other residential type environments;
 - bed and breakfast type environments.

 
WARNING

1. If the supply cord is damaged, the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard must replace it.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Appliances are not intended to be operated by means of an external timer or separate remote control system.
4. This appliance is intended to be used in household and similar applications such as:
Staff kitchen areas in shops, offices and other working environments,
Farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

SPECIAL WARNING



Recycling symbol, don't dispose of the product with household refuse.

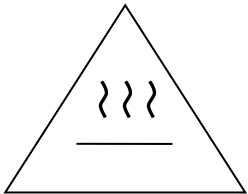

Caution: The temperature of the accessible surface may be high when the appliance is operating.